

VI.5.3D-RRSMNMOB PROGRAM FCST HCL TECHNIQUE RRSMNMOB

Purpose

Technique RRSMNMOB sets whether observed mean miscellaneous data are to be printed.

Valid values are NO (0) and YES (1).

The Global default value is NO (0).

This Technique is Universal.

Form of Input

RRSMNMOB(integer)

where integer is 1 or 0 specifying whether or not to print data

Example

RRSMNMOB(1)

The observed mean miscellaneous data will be printed.